VR1: User Guide

8/04/2009

Location of controls

VOICE RECOGNITION
alarm clock radio

User Guide VR-1

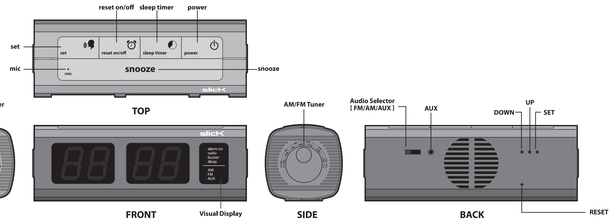

Voice Recognition

This **Alarm Clock** is capable of reacting and responding to your voice commands. The incorporated **Voice Recognition** technology makes setting the time and alarm a simple and stress free experience. We hope you will find this product as easy to use yet undeniably sophisticated in its operation as we do.

For the best results when using the **Voice Recognition** feature, please follow the steps below:

- Wait for the **BEEP TONE** that is heard after the voice prompt, and allow a moment to pass before responding.
- Speak clearly and slowly within **3** feet of the **Alarm Clock**.
- Set the **Alarm Clock** in a quiet place free from background noise.
- When setting the time or alarm, remember to add **AM** or **PM** e.g. when you hear the voice prompt "What time is it, please include **AM** or **PM**?". The **Alarm Clock** can recognize either "**3 PM**" or "**3 O'clock PM**"
- In the event that the **Alarm Clock** responds to your voice command with the incorrect time, just press the [set] button to end the setting process and try again.

Visual Display

For added peace of mind and ease of use, this **Alarm Clock** includes a **Visual Display** to confirm:

- **Alarm Status (ON)**
- **Alarm Sound (Radio / Buzzer)**
- **Sleep Timer (ON)**
- **AM/FM (Radio ON)**
- **AUX Mode (ON)**

This feature is especially useful in confirming that the alarm is set.

Plugging in the Alarm Clock

AC Connection

Connect the adapter into a standard wall outlet (120V AC, 60Hz) as shown.

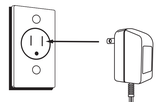

- *Only use the supplied AC adapter.*
- *Place the **Alarm Clock** on a level surface away from sources of direct sunlight or excessive heat.*
- *Protect your furniture when placing the **Alarm Clock** on a natural wood or lacquered finish. Place a cloth or other protective material between the unit and the furniture.*

Setting the time

To set the time, press and **HOLD** the [set] button, and respond to the voice prompts.

Wait for the **BEEP TONE** after the voice prompt, and allow a moment to pass before responding.

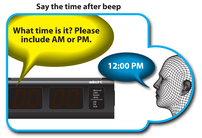

The **Alarm Clock** confirms and displays the time.

When the time is **PM**, the indicator at the upper left of the display will light up.

Setting the alarm (wake up time)

To set the alarm (wake up time) press and quickly release the [set] button, and respond to the voice prompts.

Wait for the **BEEP TONE** after the voice prompt, and allow a moment to pass before responding.

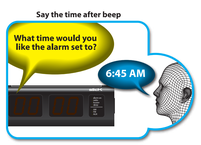

The **Alarm Clock** confirms and displays the time, and asks you to choose an alarm sound "**radio**" or "**buzzer**".

The **Alarm Clock** confirms and displays the alarm sound.

*When the alarm is set, the **LED** indicator for "**alarm on**" and "**radio**" or "**buzzer**" will be lit in the **Visual Display**.*

Alarm features

Wake up to radio

To wake up to your favorite radio station, follow the steps below:

- Set the [**Audio Selector**] to **AM** or **FM**.
- Select the radio station you would like to wake up to.
- Adjust the volume loud enough to wake you up.

*If no buttons are pressed during the radio alarm function within **1** hour, the **Alarm Clock** will automatically shut off for that day and reset to wake you the same time the following day.*

Wake up to buzzer

Wake up to a repetitive **BEEP TONE** sound.

*If no buttons are pressed during the buzzer alarm function within **3** minutes, the **Alarm Clock** will automatically shut off and ring again **9** minutes later. If this sequence occurs **2** times the **Alarm Clock** will shut for that day and reset to wake you the same time the following day.*

- **Snooze** - Press the [snooze] button while the alarm is active to get **9** minutes more sleep (the alarm will activate again after **9** minutes).
- **Resetting the alarm to wake you the same time the following day** - Press the [reset on/off] button (while the alarm is active) and the **Alarm Clock** will shut and reset to wake you up the same time the next day.

*When you reset the alarm, the "**alarm on**", and the alarm sound ("**radio**" or "**buzzer**") indicators will be lit on the **Visual Display** indicating that even though the alarm has been shut down it will still wake you the following day at the same time.*

- **Turning the alarm ON or OFF** - Press the [reset on/off] button while the alarm is inactive or **NOT RINGING**, to turn the alarm **ON** or **OFF**.

*When turning the alarm **ON**, a voice prompt will confirm the wake up time and alarm sound.*

- ***Checking the alarm time*** *- If the alarm is set and confirmed in the **Visual Display** and you would like to check the alarm wake up time- press the [reset on/off] button twice to hear a voice prompt confirming the wake up time and alarm sound.*

Press twice to check the alarm time

Sleep Timer

If you would like to go to sleep listening to your favorite radio station or music from a connected audio device, continually press the [sleep timer] button until the desired sleep time is set. The radio (or audio from a connected device) will turn on, and the **Alarm Clock** will shut down after counting down from the set time.

*Use the [**Audio Selector**] to choose AM/FM radio or AUX to listen to a connected audio device.*

Visual Display

*When the **Sleep Timer** is activated, the **LED** indicator for "**sleep**" will be lit in the **Visual Display**.*

AM/FM Radio

- **Turning ON/OFF** - Press the [power] button to turn the radio **ON** or **OFF**.
- **Selecting AM or FM** - Slide the [**Audio Selector**] switch to either "**AM**" or "**FM**".
- **Adjusting the volume** - Use the [**Volume Controller**] to adjust the volume higher or lower.
- **Changing stations** - Use the [**AM/FM Tuner**] to find and select a radio station.



For the best radio reception, adjust the Antenna.

Visual Display

*When the **Radio** is turned on, the **LED** indicator for "**radio**" and "**AM**" or "**FM**" will be lit in the **Visual Display**.*

Manually adjusting the time and alarm

If you would like to manually adjust the time and alarm, use the buttons located on the back of the **Alarm Clock**.

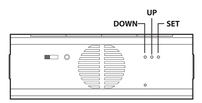

- Press the [**SET**] button to scroll through **HOUR** and **MINUTE** (time), and **HOUR** and **MINUTE** (alarm wake up time).

- Use the [**UP**] or [**DOWN**] button to adjust the hour and minutes, and confirm with the [**SET**] button.

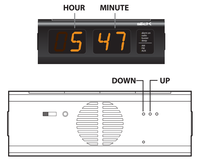

Reset

If a malfunction of the **Alarm Clock** occurs, take a metal pin or use the end of a paper clip and press it into the [**RESET**] hole to re-initialize the system of the **Alarm Clock**.

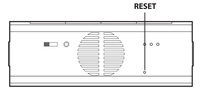

Connecting an audio device to the Alarm Clock

If you would like to connect an audio device such as an iPod®, MP3 Player or CD Player to the **Alarm Clock**, follow these steps:

- Use a **3.5mm** to **3.5mm** cable (**NOT INCLUDED**) and connect one end to the headphone jack of the audio device and the other end to the **AUX** jack located at the back of the **Alarm Clock**.

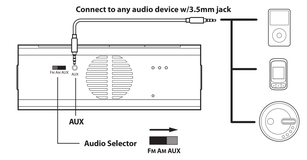

- Slide the [**Audio Selector**] switch to "**AUX**" to enter the **AUX Mode**.
- Press the [power] button on the **Alarm Clock**, and then turn on the audio device and begin playback.

*To adjust the volume, when in **AUX Mode**, use the controller from the device connected to the **Alarm Clock**.*

Visual Display

*When In the **AUX Mode**, the **LED** indicator for "**AUX**" will be lit in the **Visual Display**.*

Troubleshooting

The Alarm Clock responds with the incorrect time and does not recognize my voice commands

- Make sure you wait for the beep tone following the voice prompt, and allow a moment to pass before responding.
- When setting the time or alarm speak clearly within **3** of the **Alarm Clock**.
- Reduce any background noises such as TV, music, fans or air conditioners when setting the **Alarm Clock**.
- Include **AM** or **PM** when setting the time (eg. "**3 PM**" or "**3 o'clock PM**").

I cannot set the time

- To set the time, you must press and **HOLD** the [set] button until the **Alarm Clock** asks "**What time is it? Please include AM or PM**".

The Alarm did not wake me up at the right time

- When setting the alarm wake up time, remember to mention **AM** or **PM**.
- If you set the alarm to radio, make sure that the [**Audio Selector**] is set to **AM** or **FM**, and the volume is turned up.

The Alarm turns on the same time every day. How do I shut it off?

- To completely shut off the alarm, press the [reset on/off] button when the alarm is **NOT** ringing, the **Alarm Clock** will respond with the voice prompt "**Alarm off**".

The radio reception is not clear

- Try adjusting the Antenna or the [**AM/FM Tuner**].

When I connect an external audio device to the Alarm Clock, I do not hear anything

- Remember to turn on the power of the connected device and press play, also you must press the [power] button of the **Alarm Clock**.

When I connect an external audio device the [Volume Controller] does not work

- To control the volume of a device that is connected to the **AUX** jack of the **Alarm Clock**, you must use the volume control of the connected device.

The Alarm Clock is not functioning properly

- Take a metal pin or use the end of a paper clip and press it into the [**RESET**] hole to re-initialize the system of the **Alarm Clock**.

Still having trouble with me? Please call or email customer support
HE LP
1-877-768-8483 (Toll Free)
Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)
or
via e-mail at cs@southerntelecom.com

FCC information

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Precautions & Warranty information

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions and safety precautions.
- Follow all warnings and instructions marked on the product.
- If the LCD display breaks, do not touch the glass or liquid, and contact customer support.
- The use of a NON- RECOMMENDED accessory may cause fire, electric shock, or injury. For approved accessories, please contact customer support.
- Do not expose the **Alarm Clock** to rain or moisture.
- Clean only with a dry cloth. Make sure the **Alarm Clock** is turned off before cleaning. Do not use a liquid cleaner.
- Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
- Do not place this product on an unstable surface.
- Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug.
- This product should never be placed near or over a radiator or heat register.
- This product should not be placed in any area where proper ventilation is not provided.
- Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- Use only the power cord included with this product.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- Plug the adaptor to the socket -outlet that is closest to the equipment and which is easily accessible.
- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within **90** days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- **Provide proof of the date of purchase within the package (Dated bill of sale).**
- **Prepay all shipping costs to the authorized service center, and remember to insure your return.**
- **Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.**
- **Describe the defect or reason you are returning the product.**

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMP (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

slicK

Made in China / Designed in the USA
Manufactured by: Southern Telecom, Inc. Brooklyn, NY 11232
© 2009 Southern Telecom, Inc. All rights reserved.
Slick is a registered trademark of Southern Telecom, Inc.
www.slickusa.com

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
Other trademarks and trade names are those of their respective owners.

FRONT

BACK